


Installation Instructions

GCSL 5° Timber Hob

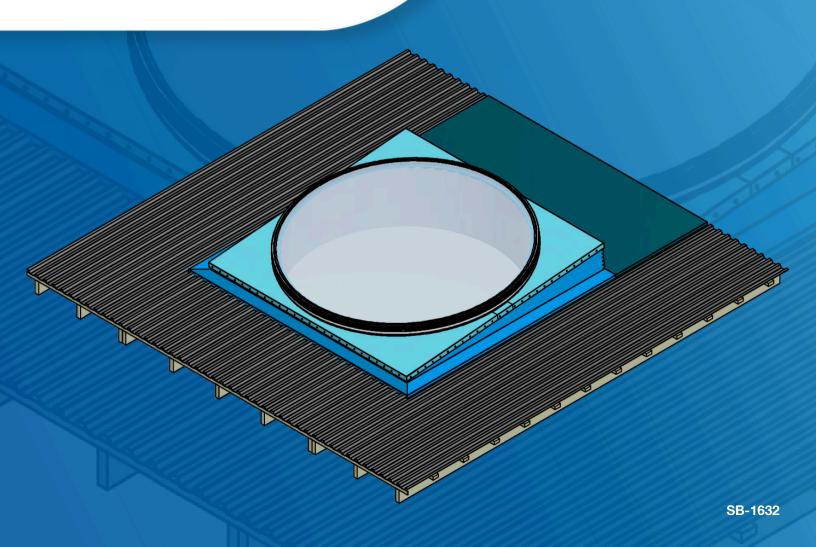


GCSL 5° Timber Hob



SUITABLE FOR SKYSPAN TRADITIONAL SKYLIGHTS


SINGLE GLAZED CODES	DOUBLE GLAZED CODES
GCSL500HB-SG	GCSL500HB-DG
GCSL600HB-SG	GCSL600HB-DG
GCSL700HB-SG	GCSL700HB-DG
GCSL800HB-SG	GCSL800HB-DG
GCSL900HB-SG	GCSL900HB-DG
GCSL1000HB-SG	GCSL1000HB-DG
GCSL1100HB-SG	GCSL1100HB-DG
GCSL1200HB-SG	GCSL1200HB-DG
GCSL1300HB-SG	GCSL1300HB-DG
GCSL1400HB-SG	GCSL1400HB-DG
GCSL1500HB-SG	GCSL1500HB-DG
GCSL1600HB-SG	GCSL1600HB-DG
GCSL1700HB-SG	GCSL1700HB-DG
GCSL1800HB-SG	GCSL1800HB-DG
GCSL1900HB-SG	GCSL1900HB-DG
GCSL2000HB-SG	GCSL2000HB-DG
GCSL2100HB-SG	GCSL2100HB-DG
GCSL2200HB-SG	GCSL2200HB-DG
GCSL2300HB-SG	GCSL2300HB-DG
GCSL2400HB-SG	GCSL2400HB-DG
GCSL2500HB-SG	GCSL2500HB-DG
GCSL500HB-SG	GCSL500HB-DG
GCSL600HB-SG	GCSL600HB-DG
GCSL700HB-SG	GCSL700HB-DG
GCSL800HB-SG	GCSL800HB-DG



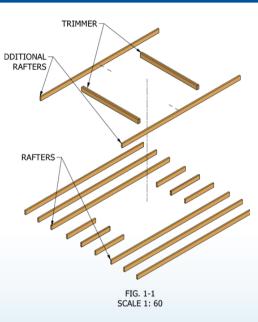


Locate desired position to fix the trimmers to the rafters. Add rafters if needed to support the hob.


02

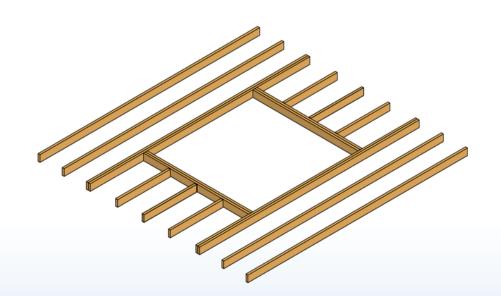


See figure above for the assembled view.



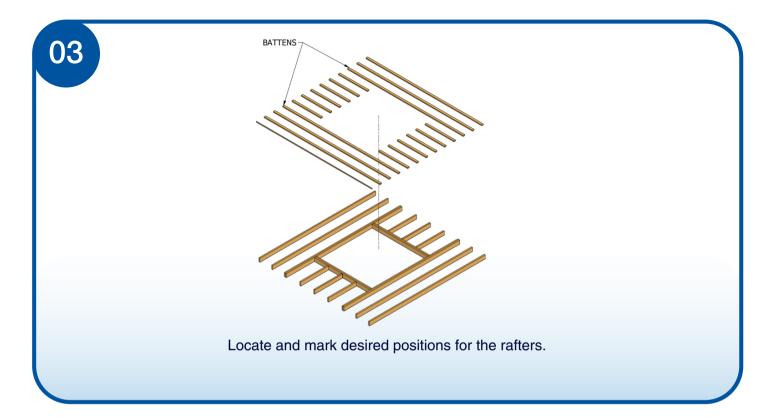


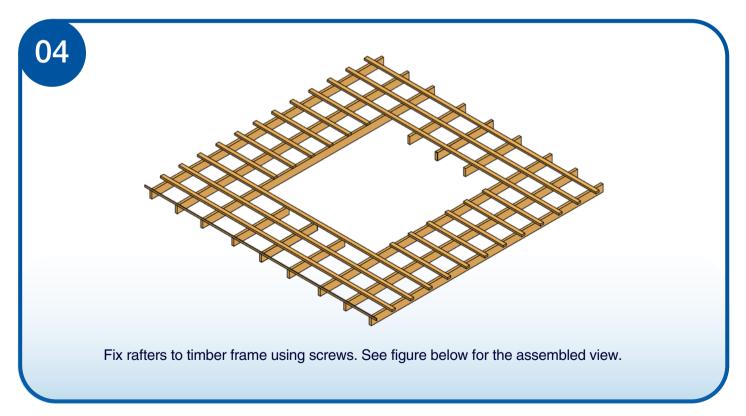



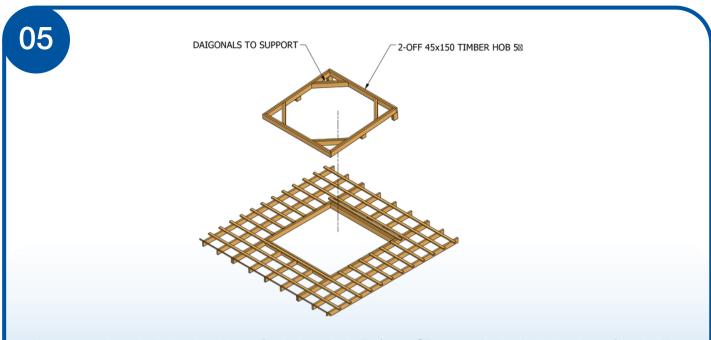



Locate and mark desired positions for timber hob. Refer to SB-1072 timber hob drawings for details.

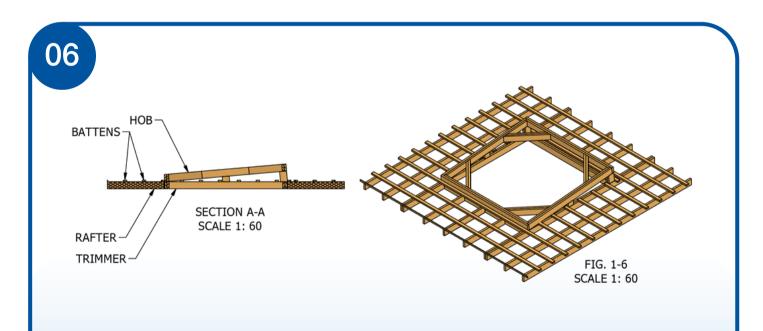


Fix timber hob to timber frame with screws. See figure above for the assembled and section views.




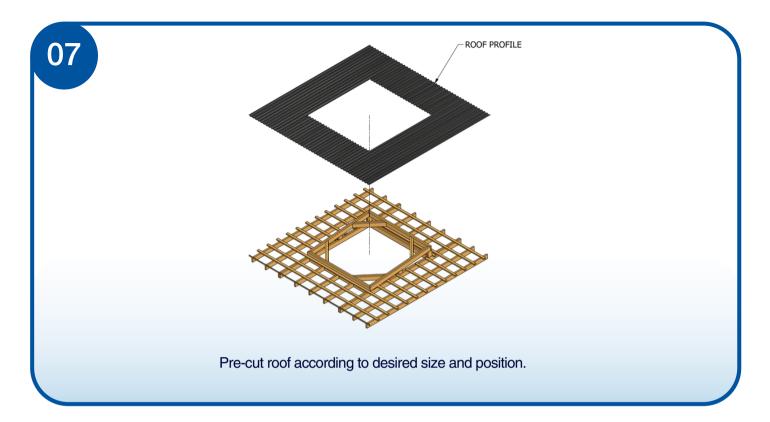

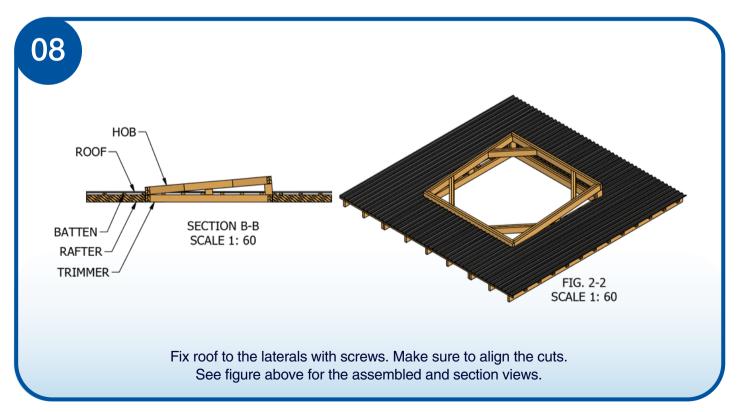





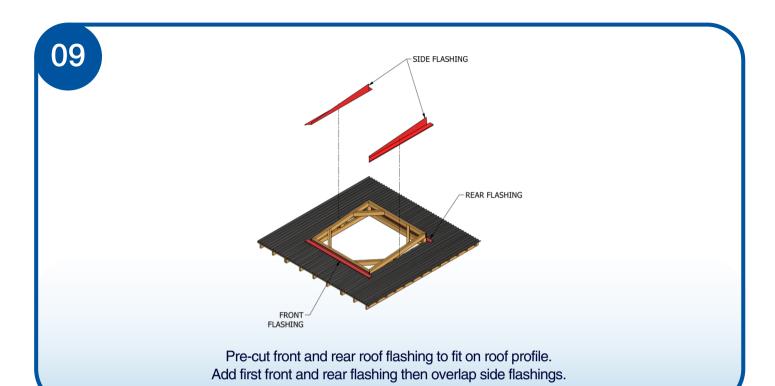

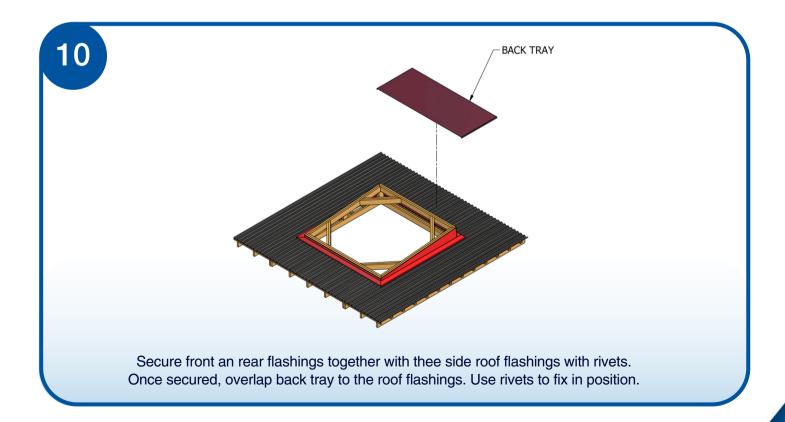




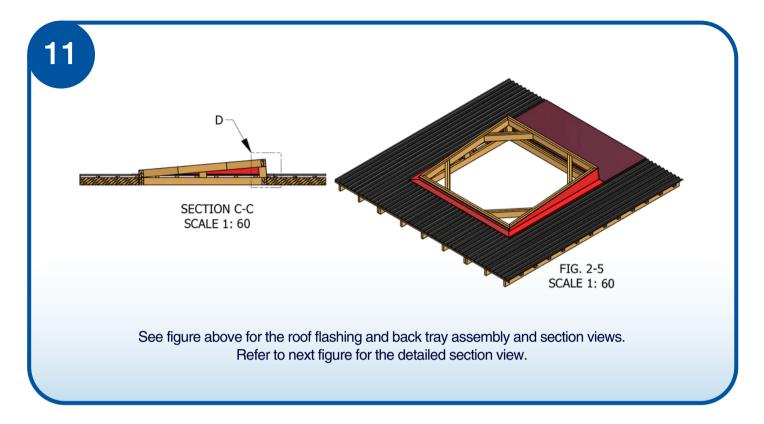


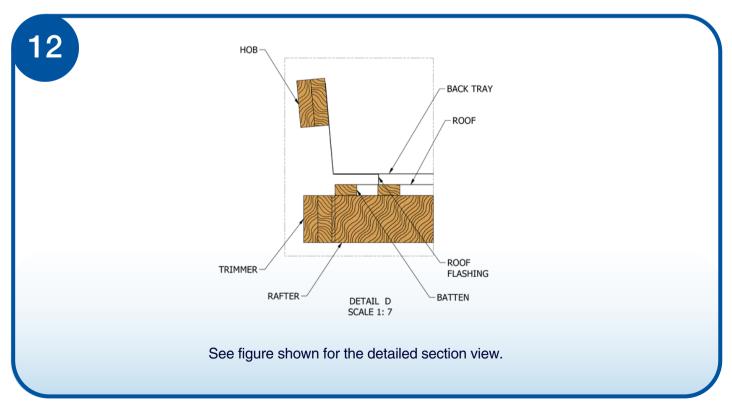




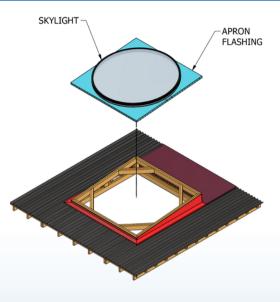

Overlap pre-assembled skylight with apron flashing to the timber hob and roof flashing. See figure below for the pre-assembled view to be fixed.

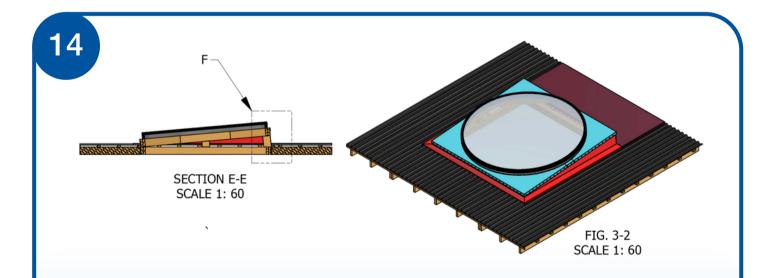


Secure pre-assembled skylight with apron flashing to the timber hob using screws all around the apron flashing. Add foam all around and in between the apron and roof flashing. See figure above for the assembled and section views.

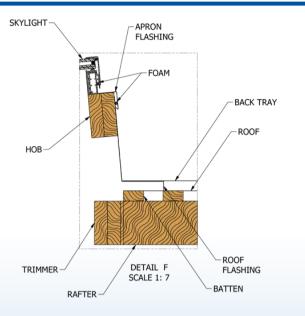


See figure shown for the detailed section view of the skylight seated on hob.

16

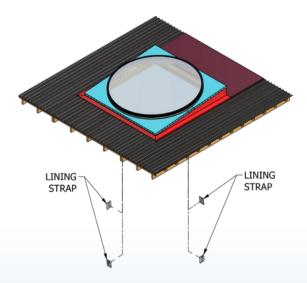

Secure skylight position by fixing lining straps to the timber hob. Note that quantity may vary depending on skylight size. For bigger skylight, 8 pieces of straps is needed. See figure below for quantity and location of straps to be added.



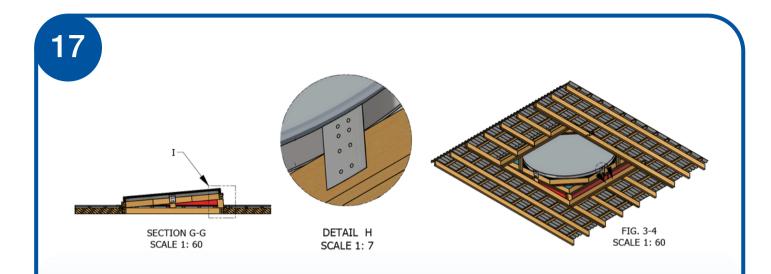

See figures above for the assembled, section, and detailed view for one corner of the assembly with straps.

Refer to next figure for the detailed section view.

SKYLIGHT

APRON
FLASHING

FOAM

FOAM

ROOF
FLASHING

ROOF
FLASHING


BACK TRAY


ROOF
FLASHING
BATTEN

SCALE 1: 7


See figure shown for detailed section view of the skylight being fixed with straps on hob.



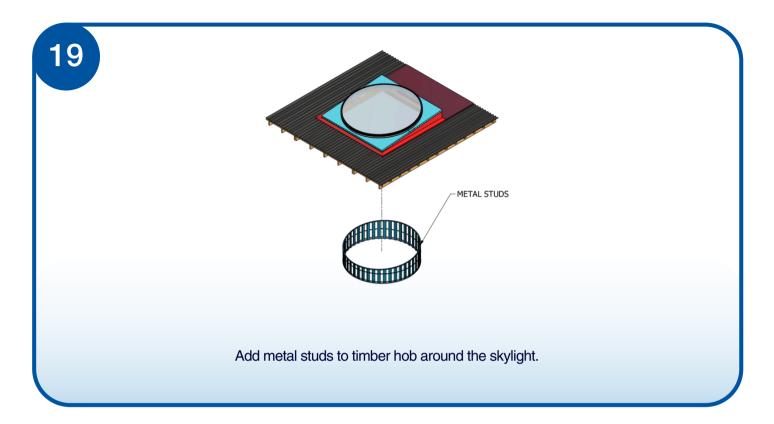

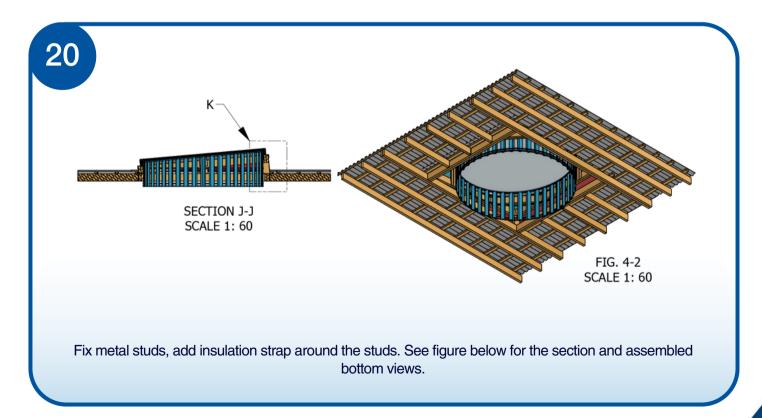




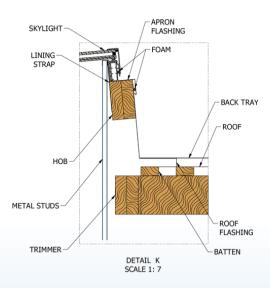


See figure shown for detailed section view of the metal studs around the hob.


22

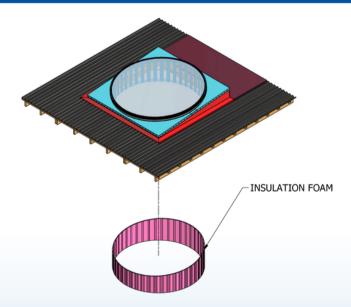


Add insulation foam in between metal studs. Secure them with the insulation strap around the metal studs.




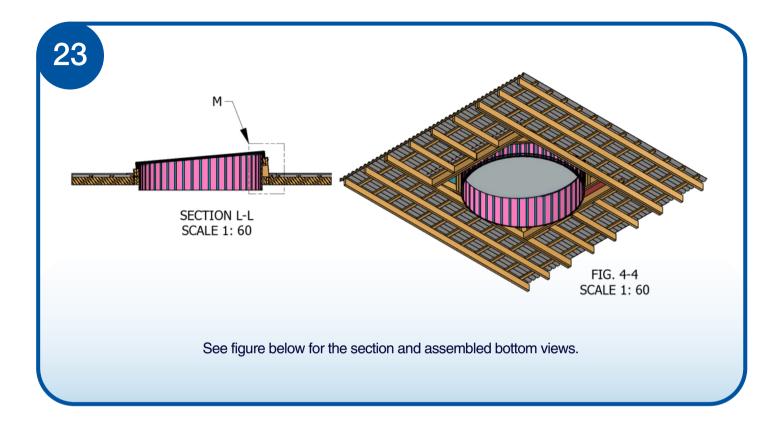

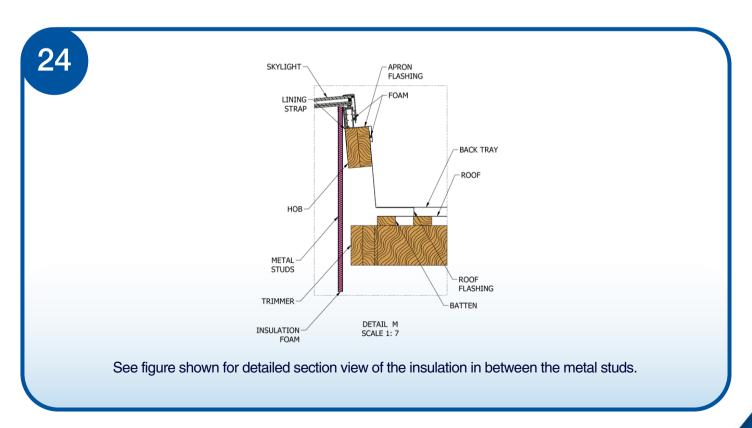




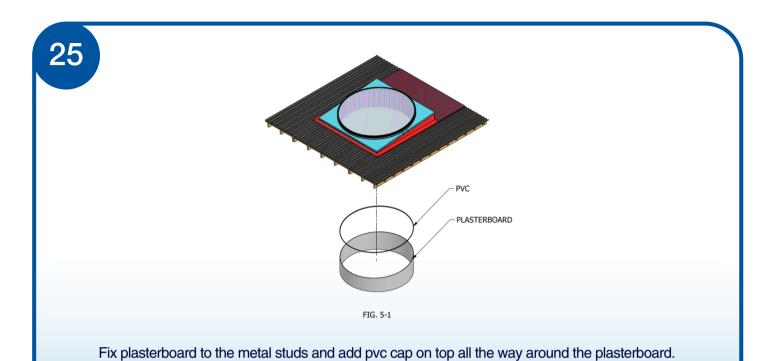

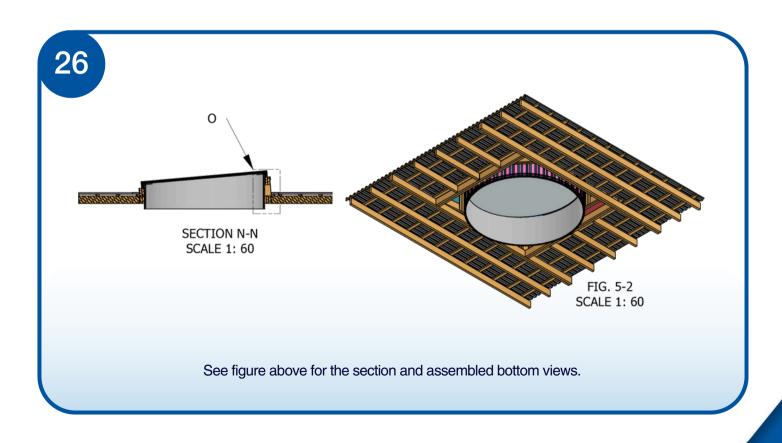




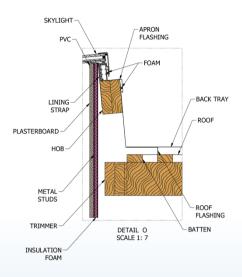

See figure shown for detailed section view for the assembly with plasterboard and cap.

28

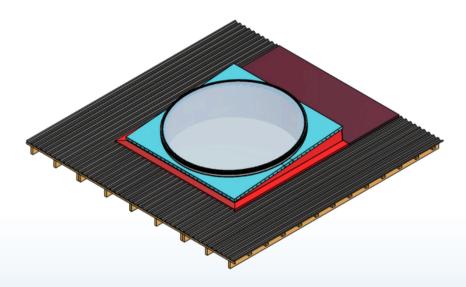

See figure above for the isometric view of the final assembly.



Instructions

GCSL 5° Timber Hob